



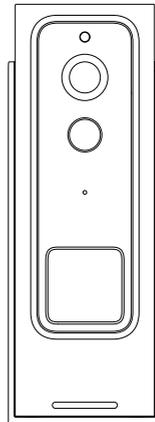

# User Manual

## Smart Video Doorbell

Version: 1.0

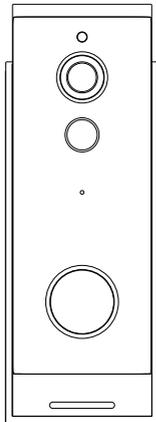


## Important Note


1. The device is powered by rechargeable lithium batteries. When it is fully charged, the battery life is approximately six months. The Mobile App will send a notification when the battery voltage is low. Please recharge the device in time if you get the notification.
2. Keep the Doorbell within your router's range.
3. Make sure to select a place where the Wi-Fi signal is uninterrupted. Thick or insulated doors can greatly reduce the strength of your Wi-Fi signal even if your router is close by. It is recommended to test the connectivity before installing the Doorbell.
4. The device is designed based on the low power consumption technique. It could be remotely turned on with PIR human motion detection or doorbell press. The device will work for 30 seconds after waking up every time and then it goes back to standby.

Due to regular upgrades of systems and products, NGTeco could not guarantee exact consistency between the actual product and the written information in this manual.

# Overview

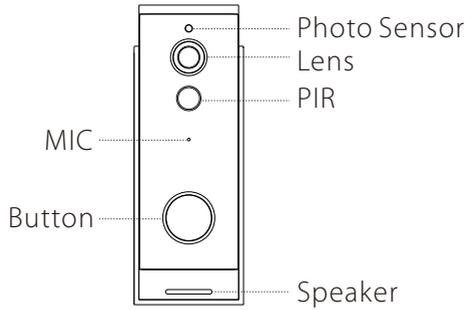

# Installation Diagram

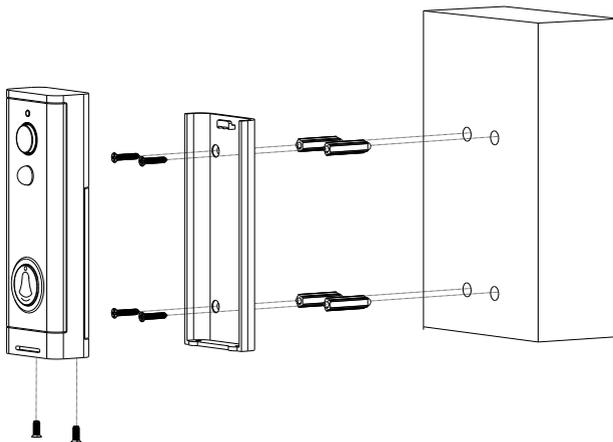


1. Press the back plate against the wall and drill the hole. Fix the back plate on the wall with screws.
2. Insert batteries and cover them with a battery cover, attach the doorbell to the back plate.
3. Fasten the doorbell to the back plate with a security screw.

# How to connect the Doorbell to NGTeco Home?

## Step 1: Account Registration

Search the **NGTeco HOME** App in Apple App Store or Google Play Store and download the App to your mobile phone /Tablet.

Open the **NGTeco HOME** App and log in with your account. If you do not have an account, create an account with your phone number or Email.

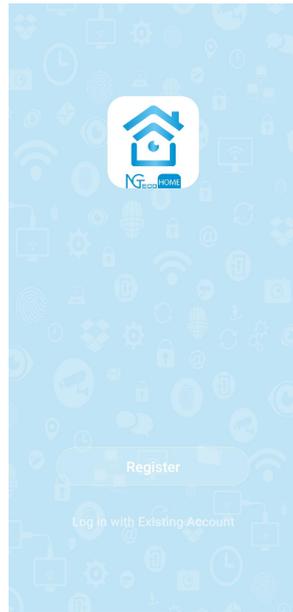

## Step 2: Power on the Doorbell


Insert the provided rechargeable battery and plug the doorbell into the power socket. Wait for a few seconds until you hear the prompt **"The Doorbell is now ready to begin paring"**.

### Note:

1. The Power Adapter is not included in the box, please use an Adapter with 5V, 1A output.
2. If you did not hear the prompt, press, and hold the **"Reset"** button for 5 seconds until you hear the prompt **"System reset"**.

### Step 3: Add the Doorbell to the App

Tap the “+” button on the top right corner of the interface, and then select the “**Video Doorbell**” option. Choose the “**Next Step**” button on the next screen.

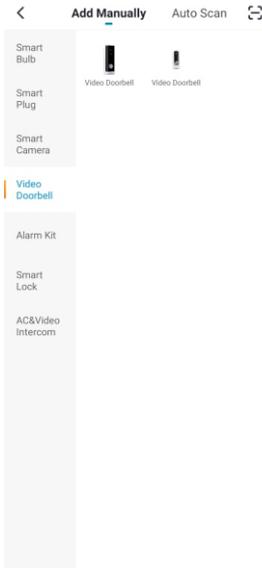

### Step 4: Add the Wi-Fi Details

Enter the Wi-Fi name and Password. Then tap the “**Confirm**” button.

**Note:** The doorbell only works on 2.4GHz Wi-Fi networks.

### Step 5: Scan the QR Code

1. The App screen displays a QR code. Show the QR code towards the doorbell lens, and the doorbell will scan the QR code.
2. Once you hear a long beep, tap the “**I heard a prompt**” button on your mobile.

**Note:** Please hold the phone about 15 to 20 cm away from the doorbell.


# Basic Functions

The Video Doorbell supports the following functions:

- Two-way Audio
- Video recording saved to the local file
- Take Photo Playback video and save on Micro SD card

## Live view

In the device list section, it shows all the devices connected successfully to the Mobile App. Click the desired device to view live videos.

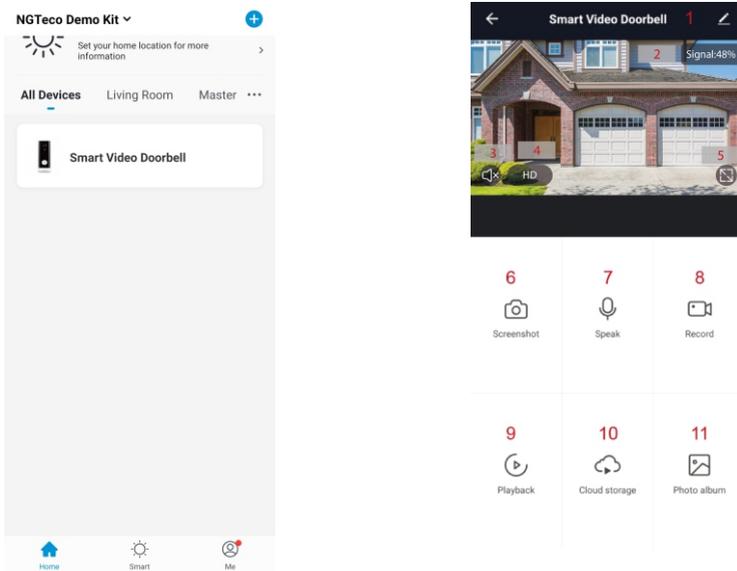

1. Settings and Management	2. Wi-Fi Signal Strength	3. Audio button	4. SD/HD
5. View Full Screen	6. Screenshot	7. Voice Chat	8. Record live view
9. Playback Video	10. Cloud Storage	11. View Photos	

# SD Card Video Playback


## Micro SD Card Recording:

1. APP wake up the device and take video.
2. Press button to wake up the device and take video.
3. Motion detection and take video.

**Note:** Currently, the device only supports Micro SD cards with the FAT32 system format. Others cannot be recognized.

## Device Settings

Click the corresponding device to view the live videos directly in the device list section. Click edit  at the top right corner to set the device parameters.

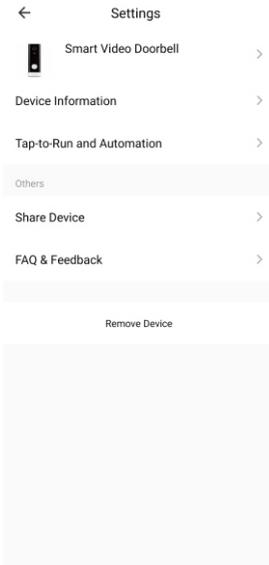

### Modify Device Name

Click "**Device Name**" on the setting page to rename the device.

### Device Sharing

Click "**Share Device**" on the setting page to share the device details with other family members.

## Device Information

Click "**Device information**" on the setting page to check device information.

## Power Management Setting

Click "**Power Management Setting**" to check the power status or set the low battery options. The supported range of low battery management is **10%** to **50%**.

## Basic Function Setting

Click "**Basic Function Setting**" to set below functions:

- **Flip Screen:** On/Off
- **Time Watermark:** On/Off
- **Talk Mode:** One-Way Talk/Two-Way Talk

## PIR Sensitivity Settings

Click "**PIR**" to set the sensitivity.

- **PIR:** Low/Medium/High/Off
- **Off:** Close the PIR function
- **Low:** Wake up and record the video. If there is any motion in front of the camera which lasts for more than 7 seconds will be detected. A notification will be sent to the mobile at the same time.
- **Medium:** Wake up and record the video. If there is any motion in front of the camera which lasts for more than 5 seconds will be detected. A notification will be sent to the mobile at the same time.
- **High:** Wake up and record the video. If there is any motion in front of the camera which lasts for more than 1 second will be detected. A notification will be sent to the mobile device at the same time.

**Note:** In a crowded environment, it is recommended to close or set the device to LOW sensitivity to reduce unwanted notifications and videos.

## Memory Card Settings

Click "**Memory Card Setting**" to check the Micro SD card status including total capacity, used and remaining capacity, or format the memory card.



## Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**IMPORTANT!** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

1600 Union Hill Road, Alpharetta, GA 30005  
Tel: 770-800-2321(US)  
[www.ngteco.com](http://www.ngteco.com)

